

Work Order ID 149182

July 21, 2016 10:51:36 AM

D350-591-312
REV. B

149182

Airbus Aug 31

Page 1

Item ID: D350-591-312

Revision ID:

Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016 Start Qty: 10.00

Required Date: 8/31/2016 Req'd Qty: 10.00

Reference:

N900040100

Setup Start *NS1*

Stop *NS2*

Cust Item ID:

Customer:

Approvals: Process Plan: SH Date: 7/21/16 Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start *NR1*

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr								
D3272	Rev B								

100	Document Control	0.00							
-----	------------------	------	--	--	--	--	--	--	--

100

DC

Doc.Control -USB or Paperwork

DOCUMENT CONTROL

Memo

Photocopy bluefile and type labels as per PPP D350-591-312 CHG001

0.00

DAS
27
9-89

AUG 21 2016

110

110

Large Fab

Large Fab

Large Fab

Memo

1-Bevel end for welding FWD ONLY

2-Weld Support using Jig DT10115, weld Fwd End Plate as per QSI 004 & Dwg D3272

A/R Aluminum Rod MB1562/MB4826

3-Grind End Plate flush

0.00

0.67

10

BE16-08-09

B#149182 x 10 R H

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QS1042) Approval		
Description Work Order Deviation				Disposition				Completed By	
QAC FS 2004								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER :							
Misidentified ☐	Past Due ☐								

July 21, 2016 10:51:36 AM

Page 2

[illegible]

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
2022 01 20A 2022 01 20A				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Work Order ID 149182

July 21, 2016 10:51:36 AM

149182

Page 3

Item ID: D350-591-312
 Revision ID:
 Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible
 Start Date: 7/21/2016 Start Qty: 10.00
 Required Date: 8/31/2016 Req'd Qty: 10.00
 Reference:

Accept

N900040100

Setup Start ***NS1***

Stop ***NS2***

Cust Item ID:

Customer:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start ***NR1***

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150	QC7-Inspect Chemical Conversion Coat	0.00							
150									
QC	Memo	0.02							
Quality Control									
180		0.00							
180	Large Fab								
Large Fab	Memo	0.67							
Large Fab	1-Assemble Leg Assembly as per Dwg D3272.								
	2-Leave one rivet out until welding is complete.								
	3-Bevel Aft end for welding								
	4-Inspect for foreign object as per QSI 024								
	5-Weld Aft End Plate as per QSI 004 & Dwg D3272								
	A/RAluminum Rod <u>4130137</u>								
	6-Grind End Plate flush								
	7-Install last rivet as per Dwg.								

10

DAS
38

AUG 11 2016

10x

DAS
43
9-89

AUG 17 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
		OTHER :			

Work Order ID 149182

July 21, 2016 10:51:36 AM

149182

Page 4

Item ID: D350-591-312**Accept*****N900040100*****Setup Start *NS1*****Revision ID:****Stop *NS2*****Item Name:** Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible**Start Date:** 7/21/2016 **Start Qty:** 10.00***10*****Cust Item ID:****Required Date:** 8/31/2016 **Req'd Qty:** 10.00***10*****Customer:****Reference:****Approvals:** **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____**Run Start *NR1*****QC:** _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____**Stop *NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

190

QC10- Inspect visual per QSI004- ground welds

0.00

190

QC

Memo

0.00

Quality Control

DAS

38

9-89

AUG 17 2016

200

QC5- Inspect part completeness to step on W/O

0.00

200

QC

Memo

0.03

Quality Control

DAS

38

9-89

AUG 17 2016

210

Chemical Conversion Coat per QSI005 4.1

0.00

210

HandFinish

Memo

0.17

Hand Finishing

(10)

2016/08/17
3ET

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐
OTHER : _____					

Work Order ID 149182

July 21, 2016 10:51:36 AM

149182

Page 5

Item ID: D350-591-312 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible
 Start Date: 7/21/2016 Start Qty: 10.00 ***10*** Cust Item ID:
 Required Date: 8/31/2016 Req'd Qty: 10.00 ***10*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
220 *220* Powdercoat Powder Coating	White Gloss(Ref:4.3.5.1) per OSI005 4.3-Alum <i>M134788</i> Memo START TIME: <i>1:45</i> OVEN TEMPERATURE: <i>320°</i> FINISH TIME: <i>2:15</i>	0.00 0.35				<i>10</i>	<i>0</i>	<i>1608-18</i>	<i>34</i> 9-89
230 *230* HandFinish Hand Finishing	Wing Walk as per dwg QSI005 4.4 Batch <i>M135317</i> Memo	0.00 0.37				<i>(10) RH</i>		<i>2016/08/18</i> <i>PA</i> DAS 15 9-89 <i>BEB</i>	
240 *240* QC Quality Control	QC3- Inspect Part Finish Memo	0.00 0.02				<i>(10)</i>		<i>10</i> DAS 38 9-89 <i>AUG 19 2016</i>	

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : _____					

July 21, 2016 10:51:36 AM

Page 6

[illegible]

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : _____					

Work Order ID 149182

July 21, 2016 10:51:36 AM

149182

Page 7

Item ID: D350-591-312**Accept*****N900040100*****Setup Start *NS1*****Revision ID:****Stop *NS2*****Item Name:** Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible**Start Date:** 7/21/2016 **Start Qty:** 10.00***10*****Cust Item ID:****Required Date:** 8/31/2016 **Req'd Qty:** 10.00***10*****Customer:****Reference:****Approvals:** **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____**Run Start *NR1*****QC:** _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____**Stop *NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
280	QC21- Final Inspection - Work Order Release	0.00							
280									
QC	Memo	0.17							
Quality Control									

DAS
21
9-89

AUG 29 2016

Lm 16/08/29

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition				Completed By																	
02-01 12 08-0								Lead hand / Supervisor Approval Verification																	
								QC / QA Coordinator Approval																	
Root Cause		FAULT CATEGORY																							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐	OTHER : _____																			

Picklist Print

July 21, 2016 10:51:41 AM

Page 1

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

Comments: IPP Rev:A04.03.22New issue KJ/RF
 IPP Rev:B 07-06-09 Added D3572-1 JLM
 IPP Rev:C 08-04-02 ECN1163 DD verified by:EC
 IPP Rev:D 08-04-08 ECN1164 DD verified by:eC IPP Rev:D
 fixe route seq in bom DD 10.04.28 verified by:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D3272-1 *D3272-1* Step		Manufactured	No			110	Each	0.0000	1	10			
									**	<u>2148500*10</u>		BE16-08-04	
D3067-1 *D3067-1* End Plate		Manufactured	No			110	Each	64.0000	1	10			
									**	<u>BE160804</u>			
					<u>Location</u>			<u>Loc Qty</u>		<u>Loc Code</u>			
					WA003			64					
					145081			16					
					146024			48		<u>10</u>			
D3219-1 *D3219-1* Plate		Manufactured	No			110	Each	48.0000	2	20			
									**	<u>BE160804</u>			
					<u>Location</u>			<u>Loc Qty</u>		<u>Loc Code</u>			
					WA003			48					
					146684			48		<u>20</u>			
D3066-1 *D3066-1* Spacer		Manufactured	No			180	Each	68.0000	2	20			
									**	<u>BE16-08-16</u>			
					<u>Location</u>			<u>Loc Qty</u>		<u>Loc Code</u>			
					WA003			68					
					146706			68		<u>20</u>			

Picklist Print

July 21, 2016 10:51:41 AM

Page 2

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

MS20600-AD4W4

Purchased

No

180

Each

1,548.000

16

160

MS20600-AD4W4

Rivets

Location

Loc Qty

Loc Code

CCK005

1270

- M133990

770

M134955

500

LG

74

M133694

74

ST308

144

- M133990

144

WA003

60

M133990

60

D3065-041

Manufactured

No

180

Each

8.0000

1

10

D3065-041

Step Leg Assembly

Location

Loc Qty

Loc Code

WA002

8

145083

1

145654

7

D3067-1

Manufactured

No

180

Each

64.0000

1

10

D3067-1

End Plate

Location

Loc Qty

Loc Code

WA003

64

145081

16

146024

48

July 21, 2016 10:51:42 AM

Shop Packet Print

Page 2

Picklist Print

July 21, 2016 10:51:42 AM

Page 3

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

AN3-35A

Purchased

No

250

Each

87.0000

2

20

AN3-35A

Bolt

**

PC DAS 28 9-89

Location

Loc Qty

Loc Code

FG

10

122800

10

ST348

77

m134167

50

m134497

1

m134943

26

D3235-1

Manufactured

No

250

Each

90.0000

2

20

D3235-1

Mounting Lug

**

PC DAS 28 9-89

Location

Loc Qty

Loc Code

ST521

90

146290

90

D3278-041

Manufactured

No

250

Each

2.0000

1

10

D3278-041

Support Assembly

**

20
10
B148625 PC DAS 28 9-89

Location

Loc Qty

Loc Code

ST522

2

145581

2

DAS 27 9-89

JUG 19 2016

Picklist Print

July 21, 2016 10:51:42 AM

Page 4

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

NAS1149D0463J

Purchased

No

250

Each

2,080.000

16

NAS1149D0463.I

WASHER

160
X M 135390 PC
DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

GA	480
M132035	15
M134508	65
M135056	400
ST260a	600
M135056	600
ST263	1000
M134943	1000

NAS1149D0563J

Purchased

No

250

Each

1,055.000

4

NAS1149D0563.I

Washer

PC
DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

GA	207
m125807	2
m133769	205
ST263	749
m134497	4
m135058	745
ST269	99
m128257	99

AUG 19 2016

40

Picklist Print

July 21, 2016 10:51:42 AM

Page 5

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

AN5-36A

Purchased

No

250

Each

131.0000

2

20

AN5-36A

Bolt

**

14xM135297 PC DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

over004

100

M135297

100

ST336

31

M130466

15

M134861

16

D2618

Manufactured

No

250

Each

160.0000

2

20

D2618

Bushing

**

PC DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

ST008A

160

146622

5

147525

155

D2230-3

Manufactured

No

250

Each

166.0000

4

40

D2230-3

Mounting Lug

**

PC DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

FG

8

109344

4

89045

4

ST521

2

144487

2

ST525A

156

146287

156

AUG 19 2016

40

Picklist Print

July 21, 2016 10:51:42 AM

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

D2856-400 Manufactured No

250 f

327.1632 1.2

***D2856-400*-720**

Abrasion Strip 4" Wide (Per Foot)

20X B149 045 PC DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

ST418

327.16316

141123

111.16316

146265

216

cut (2) D2856-400-720 as per dwg

MS21042L3

Purchased No

250 Each

2,344.000 2 20

MS21042L3

Nut

PC DAS 28 9-89 DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

CCK007

600

m135056

600

FP001

14

m133790

14

GA

571

m134360

112

m135135

459

OVER007

700

m135135

700

ST303

459

m134039

12

m134943

447

20

AUG 19 2016

Picklist Print

July 21, 2016 10:51:42 AM

Page 7

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

AN4-13A

Purchased

No

250

Each

257.0000

8

AN4-13A

Bolt

80 135390
X ~~135390~~ PC
DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

FG	20	
122808	20	
GA	59	
m134167	35	
m134634	24	
over003	100	
m134943	100	
ST343	78	
m134852	78	

MS21042L5

Purchased

No

250

Each

508.0000

2

20

MS21042L5

Nut

PC
DAS 28 9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

GA	81	
m127813	81	
OVER007	200	
m135297	200	
ST303	227	
m134055	6	
m134955	121	
<u>m135058</u>	100	

20

AUG 19 2016

Picklist Print

July 21, 2016 10:51:42 AM

Page 8

Work Order ID: 149182

149182

Parent Item: D350-591-312

D350-591-312

Parent Item Name: Heli-Access-Step™ RH - High Gear, Long Step, Aerazur Float Compatible

Start Date: 7/21/2016

Required Date: 8/31/2016

Start Qty: 10.00

Required Qty: 10.00

MS21042L4

Purchased

No

250

Each

2,874.000

8

80

MS21042L4

Locknut

PC

DAS
28
9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

FP001

51

m133363

51

GA

156

m133769

156

OVER007

2000

m135127

1000

m135297

1000

ST3003

100

m134955

100

ST303

550

m127376

12

m134861

38

m135058

500

ST305

17

m130922

17

80

NAS1149D0363J

Purchased

No

250

Each

2,435.000

4

40

NAS1149D0363J

Washer

PC

DAS
28
9-89

DAS
27
9-89

Location

Loc Qty

Loc Code

GA

402

m134055

402

ST260a

1000

m135297

1000

ST263

1033

m134676

33

m134955

1000

40

AUG 19 2016

July 21, 2016 10:51:42 AM

Shop Packet Print

Page 8



DESIGN <i>qp</i>	DRAWN BY <i>B</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>H</i>	DRAWING NO. D3272	REV. B SHEET 1 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG	SCALE NTS
A	04.03.01	NEW ISSUE	
B	07.05.18	D3272-1 WAS D2622-120	

RELEASED

07.06.04 *H*

SH 149182
July 21/16

QTY -041	QTY -042	PART NUMBER	DESCRIPTION
X		D3272-041	STEP ASSEMBLY, HIGH LONG (LH)
	X	D3272-042	STEP ASSEMBLY, HIGH LONG (RH)
1	1	D3065-041	LEG ASSEMBLY
2	2	D3066-1	SPACER
2	2	D3067-1	END PLATE
2	2	D3219-1	SUPPORT
1	1	D3272-1	STEP
16	16	MS20600AD4W4	RIVET

GENERAL NOTES:


- 1) D3272-041 SHOWN. FOR D3272-042, INSTALL D3219-1 SUPPORT OPPOSITE SIDE
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005.4.1
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 5) ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
- 6) BREAK ALL SHARP EDGES 0.005 TO 0.010 MAX.

Copyright © 2004 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

DART

DESIGN <i>gp</i>	DRAWN BY <i>B</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 2 OF 3
DATE 07.05.18	TITLE STEP ASSEMBLY, HI LONG		SCALE 1:20

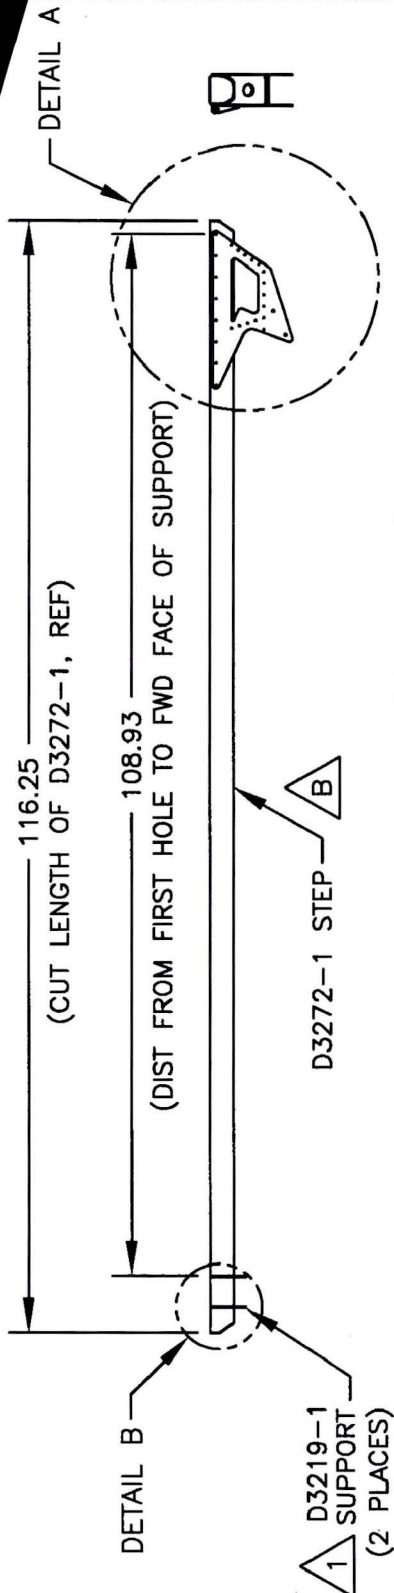

D3272-041 STEP ASSEMBLY (LH. SHOWN)
D3272-042 STEP ASSEMBLY (RH, OPPOSITE)

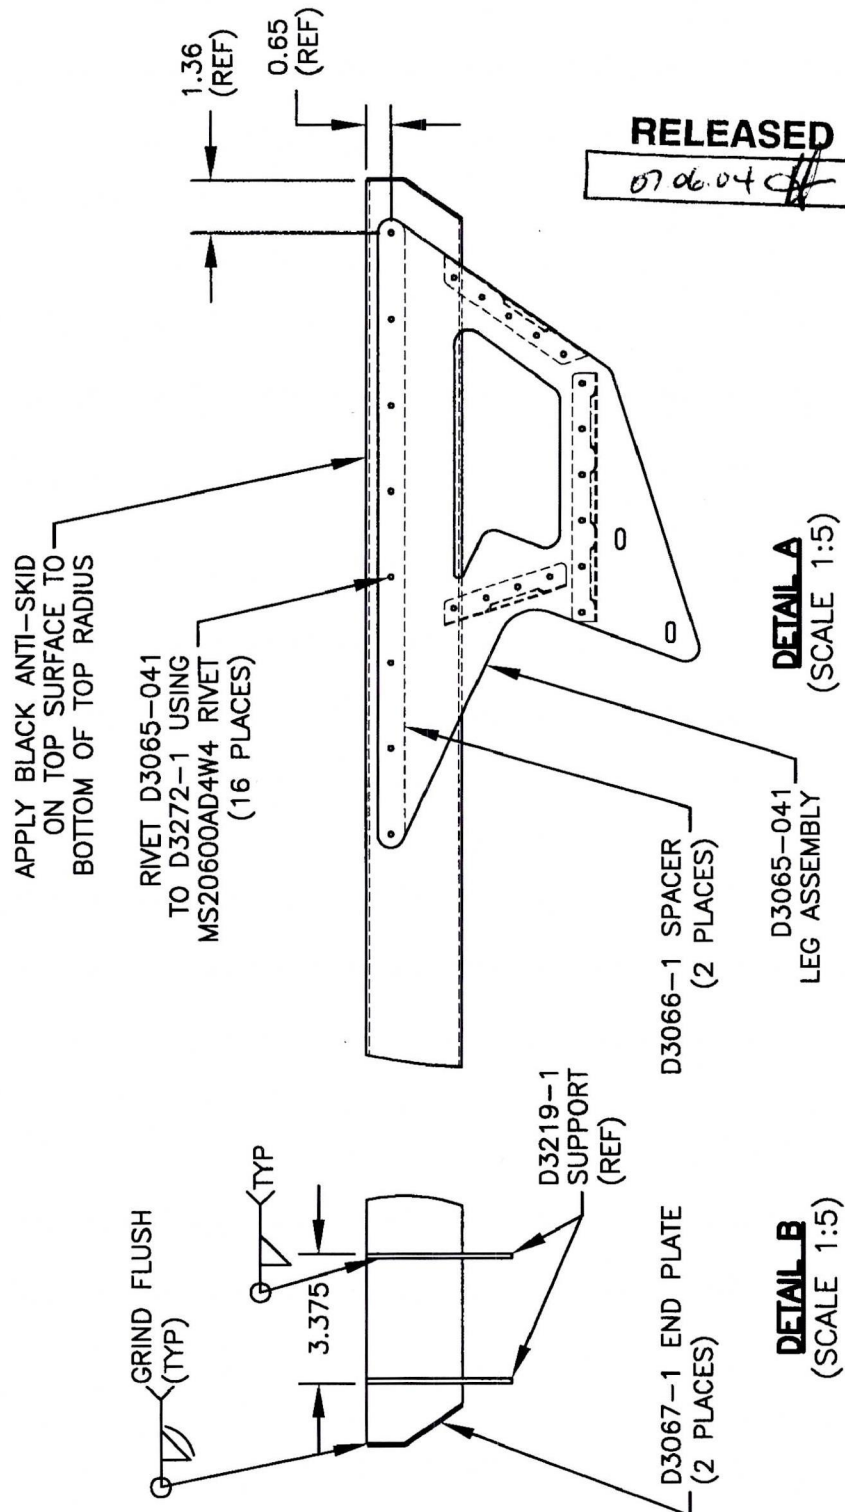

Copyright © 2004 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN <i>GP</i>	DRAWN BY <i>[Signature]</i>	DART AEROSPACE LTD. HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 3 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG	SCALE 1:20

RELEASED


07.06.04 *[Signature]*

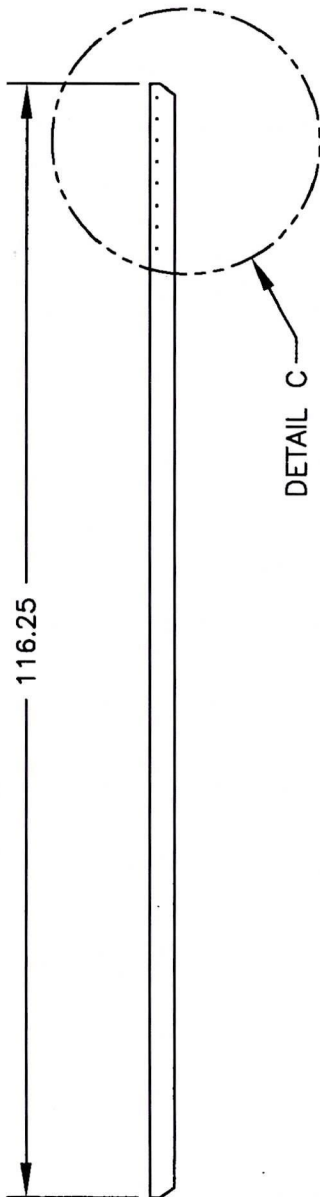

DETAIL C

B D3272-1 STEP

(MAKE FROM D2622-120 STEP EXTRUSION)

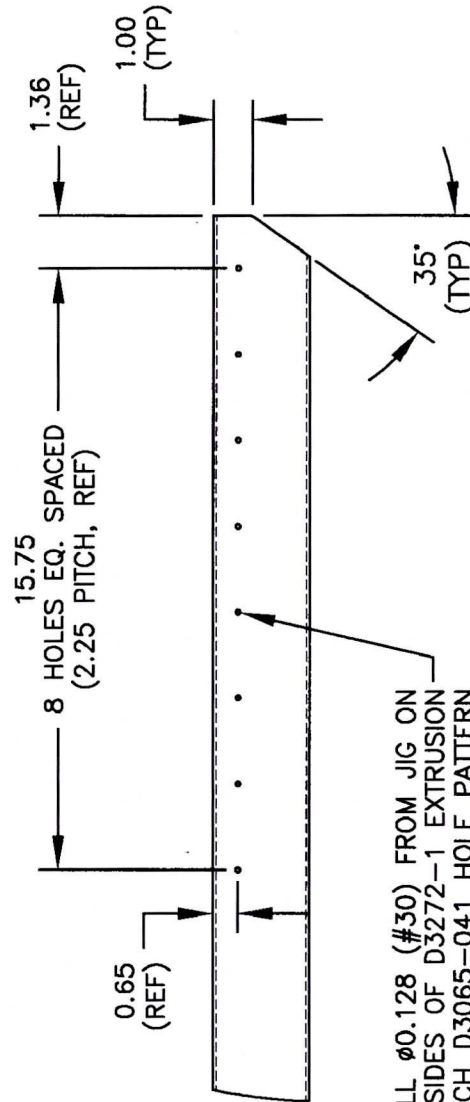

DRILL $\phi 0.128$ (#30) FROM JIG ON BOTH SIDES OF D3272-1 EXTRUSION TO MATCH D3065-041 HOLE PATTERN

DETAIL C
(SCALE 1:5)

Qty -213	Qty -214	Qty -215	Qty -216	Qty -311	Qty -312	Part Number	Description
X						D350-591-213	<i>Heli-Access-Step™</i> , Short Step – High Skid, LH
	X					D350-591-214	<i>Heli-Access-Step™</i> , Short Step – High Skid, RH
		X				D350-591-215	<i>Heli-Access-Step™</i> , Short Step – Low Skid, LH
			X			D350-591-216	<i>Heli-Access-Step™</i> , Short Step – Low Skid, RH
				X		D350-591-311	<i>Heli-Access-Step™</i> , Long Step – High Skid, LH
					X	D350-591-312	<i>Heli-Access-Step™</i> , Long Step – High Skid, RH
1						D3078-041	STEP ASSEMBLY (HIGH-SHORT, LH)
	1					D3078-042	STEP ASSEMBLY (HIGH-SHORT, RH)
		1				D3168-041	STEP ASSEMBLY (LOW-SHORT, LH)
			1			D3168-042	STEP ASSEMBLY (LOW-SHORT, RH)
				1		D3272-041	STEP ASSEMBLY (HIGH-LONG, LH)
					1	D3272-042	STEP ASSEMBLY (HIGH-LONG, RH)
2	2	2	2	4	4	D2230-3	MOUNTING LUG
2	2	2	2	2	2	D2618	BUSHING
4	4	4	4			D2732-030	CUSHION
				2	2	D2856-400-720	ABRASION STRIP
2	2	2	2	2	2	D3235-1	MOUNTING LUG
				1	1	D3278-041	SUPPORT ASSEMBLY
2	2	2	2	2	2	AN3-35A	BOLT
				8	8	AN4-13A	BOLT
4	4	4	4			AN4-15A	BOLT
2	2	2	2	2	2	AN5-36A	BOLT
4	4	4	4	4	4	NAS1149D0363J	WASHER (AN960JD10)
12	12	12	12	16	16	NAS1149D0463J	WASHER (AN960JD416)
4	4	4	4	4	4	NAS1149D0563J	WASHER (AN960JD516)
2	2	2	2	2	2	MS21042L3	NUT
6	6	6	6	8	8	MS21042L4	NUT
2	2	2	2	2	2	MS21042L5	NUT
				1	1	*DSI 9410-011	STEP MODIFICATION KIT

*DSI 9410-011 Step Modification Kits are provided with all D350-591-311 and D350-591-312 Steps. This kit is provided as an option for the installer and is therefore **NOT REQUIRED** to complete the installation of the D350-591-311 or D350-591-312 Steps. Refer to Figure 15 for installation of the DSI 9410-011 Kit.